


ILLUS. KEY	PART NO.	DESCRIPTION	ALL	1	2	3	4	5
			MODELS	A 11	A 12 W	A 12	A 11 E	A 12 E
<u>CLUTCH PEDAL</u>								
	701249	SUPPORT ASSY. - Clutch & Brake Pedal Mtg.	1					
	94574	BRACKET - Clutch Pedal Stop	1					
	113115	SCREW - Clutch Pedal Stop (5/16-18 x 1-3/4 Rd. Hd.)	1					
	702153	INSULATOR - Brake Pedal Stop	1					
	94771	CAP - Clutch Pedal Stop Screw (Rubber)	1					
	124824	NUT - Clutch Pedal Stop (5/16-18 Hex)	2					
	701248	PEDAL ASSY. - Clutch	1					
	94429	BEARING - Clutch Pedal	1					
	94428	PAD - Clutch Pedal (Steel)	1					
	94431	COVER - Pedal Pad	1					
	94435	SHAFT - Brake & Clutch Pedal	1					
	120382	LOCKWASHER - Brake & Clutch Pedal Shaft (3/8)	1					
	120369	NUT - Brake & Clutch Pedal Shaft (3/8-24)	1					
	120396	PLAINWASHER - Brake & Clutch Shaft (17/32 I.D. x 1-1/16 O.D.)	1					
	103385	COTTER PIN - Brake & Clutch Shaft (1/8 x 1)	1					
	701113	BELLCRANK ASSY. - Clutch Throwout	1					
	702077	WASHER - Clutch Throwout B/Crank (23/32 I.D. x 63/64 O.D. x .04 Thick)	1					
	702065	BUSHING - Clutch Throwout B/Crank	1					
	702070	SPACER - Clutch Throwout B/Crank Bushing	1					
	103894	PLUG - Clutch Throwout B/Crank Expansion (1")	1					
	94922	BUSHING - Bellcrank Lever	2					
	702067	SPRING - Clutch Throwout B/Crank Bushing	1					
	702065	BUSHING - Clutch Throwout B/Crank	1					
	80125	BALL - Clutch Throwout B/Crank Pivot	2					
	136857	LOCKWASHER - Ball to Brkt. (7/16 Ext. Tooth)	4					
	272123	NUT - Ball To. Brkt. (7/16-20 Hex Jam)	2					
	702063	BRACKET - Throwout B/Crank to Engine (6 cyl.)	1					
	702071	BRACKET - Throwout B/Crank to Engine (8 cyl.)	1					
	702073	ROD - Clutch Yoke to B/Crank (6 cyl.)	1					
	702074	ROD - Clutch Yoke to B/Crank (8 cyl.)	1					
	702076	SWIVEL - Clutch Yoke End	1					
	124925	NUT - Clutch Yoke Rod Adjusting (3/8-24 Hex Jam)	2					
	702075	SPRING - Clutch Yoke Return	1					
	702072	ROD - Clutch Pedal to Bellcrank	1					
	144254	CLEVIS - Clutch pedal to Bellcrank Rod (3/8)	1					
	120369	NUT - Clutch Pedal to Bellcrank Jam (3/8-24 Hex)	1					
	114785	CLEVIS PIN - Clutch Pedal to Bellcrank Rod	1					
	103385	COTTER PIN - Clutch Pedal to Bellcrank Rod (1/8 x 1)	1					
	120393	PLAINWASHER - Bellcrank Rod To Bellcrank (11/32 I.D. x 11/16 O.D.)	1					
	120394	PLAINWASHER - Bellcrank Rod To Bellcrank (13/32 I.D. x 13/16 O.D.)	1					
	103385	COTTER PIN - Bellcrank Rod to Bellcrank (1/8 x 1)	1					

ILLUS. KEY	PART NO.	DESCRIPTION	ALL	MODELS				
				1	2	3	4	5
		<u>CLUTCH AND CLUTCH CONTROLS</u>		A 11	A 12 W	A 12	A 11 E	A 12 E
30-1	08086	FLYWHEEL ASSY. - 6 cyl. Std. Trans.	1					
	08157	FLYWHEEL ASSY. - 8 Cyl. Stud. Trans.	1					
	08087	BOLT - Flywheel Mtg. (7/16-20 x 1)	6					
	08192	BEARING - Cr/Shaft Clutch Pilot	1					
30-2	08094	PLATE ASSY. - Clutch Driven	1					
30-3	08095	COVER & PLATE ASSY. - Clutch Pressure	1					
	08172	PLATE - Clutch Pressure	1					
30-4	08169	COVER ASSY. - Clutch	1					
30-5	08171	BOLT - Clutch Pressure Plate Retracting Spring (5/16-18 x 7/8)	3					
	120638	LOCKWASHER - Retracting Spring Bolt (5/16 Heavy)	3					
30-6	08170	*SPRING - Clutch Pressure Plate	3					
	08099	BOLT - Clutch Cover & Pressure Plate Assy. (3/8 Hex)	6					
	120382	LOCKWASHER - Clutch Cover & Pressure Plate Assy. (3/8)	6					
30-7	701068	BEARING ASSY. - Clutch Throwout	1					
30-8	08096	FORK ASSY. - Clutch	1					
30-9	08097	STUD - Clutch Fork Ball (1-1/2 Long 13/64-16 thread)	1					
	08098	BOOT - Clutch Fork	1					
		NOTE *Replace only in sets of 3						

CLUTCH

GROUP 11

NO.	QTY.	DESCRIPTION	UNIT	REMARKS
1	1	CLUTCH FLYWHEEL ASSEMBLY		
2	1	CLUTCH DISC		
3	1	CLUTCH PRESSURE PLATE		
4	1	CLUTCH HOUSING		
5	1	CLUTCH PIVOT PIN		
6	1	CLUTCH PIVOT BUSH		
7	1	CLUTCH PIVOT BUSH		
8	1	CLUTCH PIVOT PIN		
9	1	CLUTCH PIVOT BUSH		

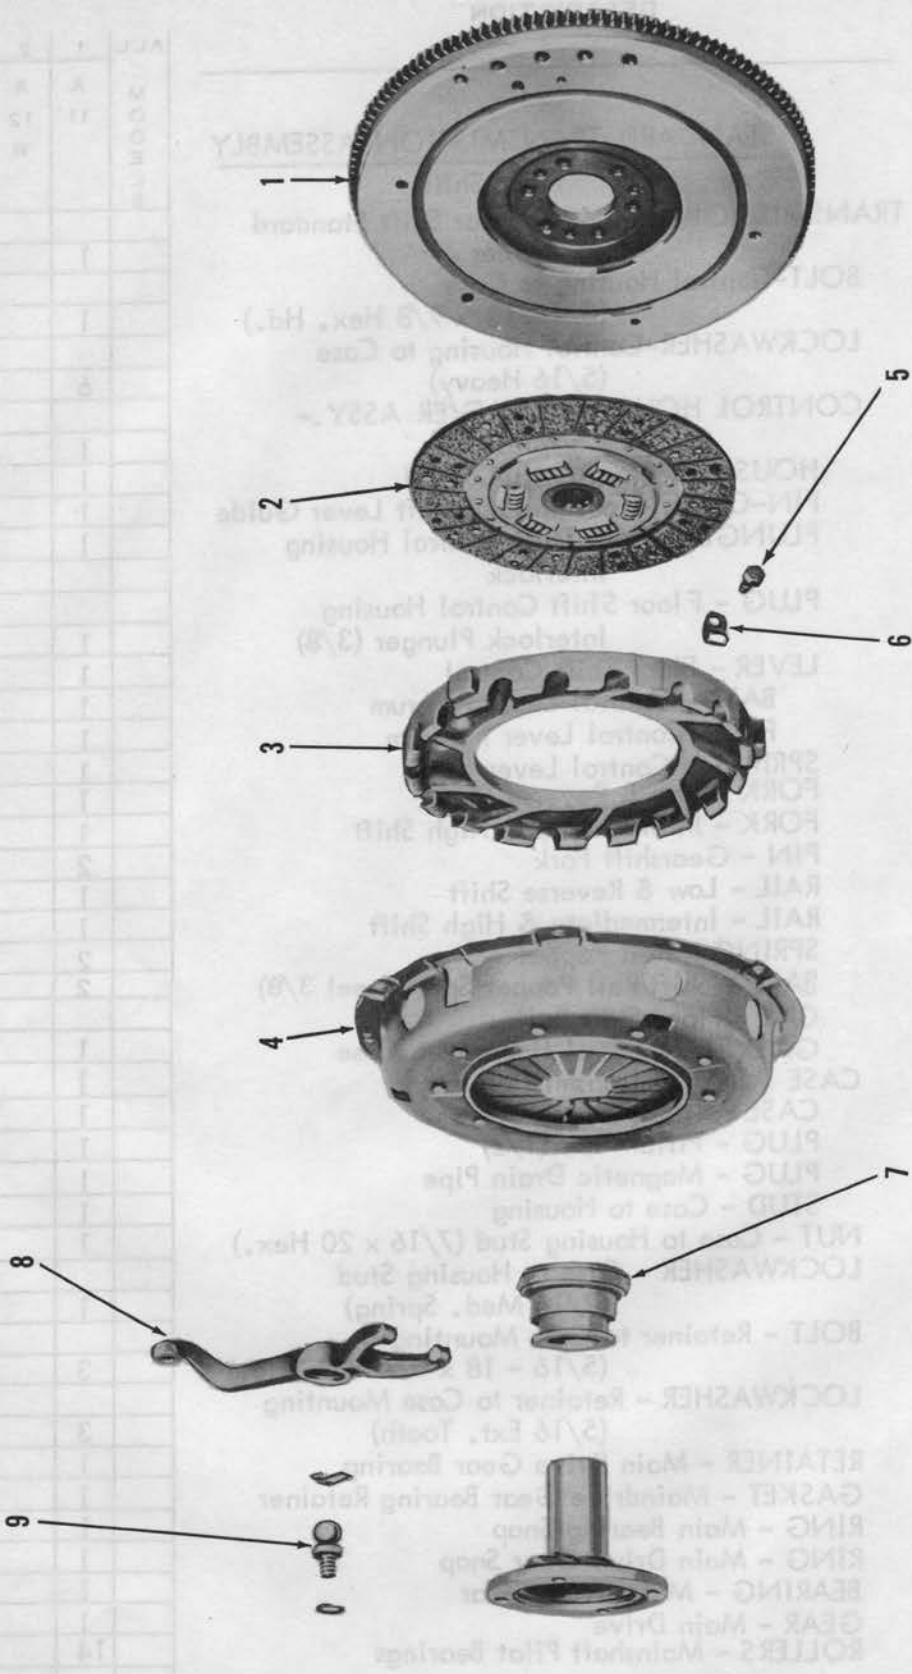

CLUTCH-FLYWHEEL, DISC & PRESSURE PLATE ASSY.