PARTS & INSTRUCTION MANUAL

CHECKER

MODEL A2 & A3

PARTS & NSTRUCTION MANUAL


FOR

CHECKER

MODEL A-2 & A-3

NOVEMBER 1, 1948

CHECKER MANUFACTURING CORP.
KALAMAZOO, MICH.

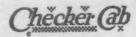

GENERAL INFORMATION

RETURNING MATERIAL

TRANSPORTATION CHARGES MUST BE PREPAID ON ALL MATERIALS SHIP-

PED TO THE FACTORY.

Returned material tags and forms are furnished gratis by the Cab Service and Parts Corporation, 315 West 68th. Street, New York, New York, and should be used whenever parts are returned either for adjustment or for credit. Each part should be tagged and listed separately with full information

New material and material which has failed in service should be listed on separate reports. Separate reports should be made on different classes of parts returned for ad-

justment; that is, axle parts and engine parts should be listed on separate reports.

Invoice number must be given on any new parts returned for credit or credit cannot be investigated.

CLAIMS

Claims for shortage of parts on a shipment must be made within twenty-four hours after delivery and must be made against the carrier. Before the consignee accepts and signs for a shipment, he should examine it for any evidence of its being in bad order. If packing cases are broken or show evidence of rough handling he should refuse shipment unless carrier signs the freight bill indicating damage.

A packing slip accompanies each shipment. The parts are double checked against

the slip before the shipment leaves the warehouse.

rer warrants each new motor vehicle manufactured by it to be free al and workmanship under normal use and service, its obligation unglimited to making good at its factory any part or parts thereof, into trade accessories (except tires) supplied by the Motor Vehicle shall, within ninety (90) days after making delivery of such purchaser or before such vehicle has been driven four thousand ver event shall first occur, be returned to it with transportation which its examination shall disclose to it's satisfaction to have been arranty being expressly in lieu of all other warranties expressed or the obligations or liabilities on its part, and it neither assumes nor aurent to assume for it any liability in connection with the sale of its all not apply to any vehicle which shall have been repaired or alternorized Checker service station in any way so as, in the judgment of effect its stability or reliability, nor which has been subject to missident."

CHECKER CAB MANUFACTURING CORPORATION

KALAMAZOO, MICHIGAN

U.S.A. "The Manufacturer warrants each new motor vehicle manufactured by it to be free from defects in material and workmanship under normal use and service, its obligation under this warranty being limited to making good at its factory any part or parts thereof, including all equipment or trade accessories (except tires) supplied by the Motor Vehicle Manufacturer, which shall, within ninety (90) days after making delivery of such vehicle to the original purchaser or before such vehicle has been driven four thousand (4,000) miles, whichever event shall first occur, be returned to it with transportation charges prepaid, and which its examination shall disclose to it's satisfaction to have been thus defective; this warranty being expressly in lieu of all other warranties expressed or implied and of all other obligations or liabilities on its part, and it neither assumes nor authorizes any other person to assume for it any liability in connection with the sale of its vehicles.

This warranty shall not apply to any vehicle which shall have been repaired or altered outside of any authorized Checker service station in any way so as, in the judgment of the Manufacturer, to effect its stability or reliability, nor which has been subject to misuse, negligence or accident."



GENERAL INFORMATION

INTRODUCTION

This parts and instruction manual is divided into sixteen (16) groups, as follows:

Group VI Steering Group VII Engine Group VIII Clutch Group XV Lubrication Group XVI Body	Group II Front Axle Group III Rear Axle Group IV Brakes Group V Wheels, Hubs, and Drums Group XI	Transmission Propellor Shaft Cooling and Heating Exhaust HE Electrical V Fuel System
--	---	--

Each group has maintenance instructions, diagrams, exploded views, and parts list. Exploded parts illustrations are placed between maintenance instruction and parts list for

easy reference. The manual is made up in loose leaf form, so that additional sheets can be added or changes made in parts pages. Parts pages are dated in upper right hand corner to aid in

keeping record of superseding pages. Parts lists show by indentation of the parts names, that these parts are included in the assembly above them.

EXAMPLE

1 621526 Back Assembly, Complete-Driver Seat, Red Spring, Drivers Seat Back 1 622731 Pad-Hair 622686 Cover Assembly Complete 621529 Cover-Drivers Seat Back, Center Cover-Drivers Seat Back, Side 623508 2 623557

Parts indented from Assembly No. 621526, are component parts of assembly. Those parts indented from Assembly No. 621529, are component parts of that assembly, but still parts of main Assembly No. 621526.

At the back of Manual are numerical and alphabetical parts lists for ease in locating

N.S.S. noted on illustrations means part Not Serviced Separately.

INSTRUCTIONS FOR ORDERING PARTS

Orders for parts should be entered on our "Customers Original Order" blanks which will be supplied gratis on request.

The following information is necessary in order that an order may be filled correctly

and promptly at our Parts Service Warehouse.

QUANTITY-Exact Number. Parts should never be ordered in "sets" or "pairs" except

where listed, as these terms are indefinite and liable to be confusing.

PART NUMBER AND NAME—State the part name as well as the part number when writing orders. Names such as "Gasket" or "Bracket" are not sufficient. We will not be responsible for errors in shipments unless complete descriptive names as shown in this book, are listed in your orders.

CAB SERIAL NUMBER-The Serial Number, Body Number and Engine Number are stamped on an aluminum plate, attached to the dash panel under the right side of the Hood. When ordering body parts, give Body number and Engine number when ordering Engine parts as well as Cab Serial number.

WHERE AND HOW TO SHIP—State street address, Postal Zone number, City and State. Advise how you wish shipment made: Parcel Post, Express, Freight, Air Express or

Parcel Post Special Delivery.

ADDRESS ORDER TO OUR PARTS SERVICE WAREHOUSE—Cab Service & Parts Corporation, 315 West 68th. Street, New York City 23, New York.

All parts are shipped either C.O.D. or billed to our order with Bill of Lading attached to Sight Draft, F.O.B. our warehouse.



TABLE OF CONTENTS

GROUP 1—FRAME AND SUSPENSION	
	2
trampation	
DADTS LIST	0
BUMPERS—FRONT AND REAR BUMPER GUARDS—FRONT AND REAR	3
BUMPER GUARDS—FRONT AND REAR FRAME	5
CHOCK ABSORBERS—FROM I AND RE	3
SHOCK ABSORBERS—FRONT AND REAR. SPRINGS—FRONT AND REAR. TRUNK RACK	6
GROUP 2—FRONT AXLE	7
SPECIFICATIONS AND INSTRUCTIONS	9
TI LUSTRATION	10
PARTS LIST	
GROUP 3—REAR AXLE SPECIFICATIONS AND INSTRUCTIONS	11
SPECIFICATIONS AND INSTRUCTIONS	15
SPECIFICATIONS AND INSTRUCTIONS ILLUSTRATION PARTS LIST	16
PARTS LIST	
GROUP 4—BRAKES—SERVICE & EMERGENCY	
GROUP 4-BRARDS-DZAVIII	18
INSTRUCTIONS	
TI I HETPATIONS	20
FRONT BRAKE	24
MASTER CYLINDER	22
PARTS LIST	25
PARTS LIST BRAKE LINES AND FITTINGS CONTROLS—SERVICE BRAKES	25
FRONT BRAKES	21
FRONT BRAKES	25
MASTER CYLINDER	23
PARKING BRAKE	
GROUP 5-WHEELS, HUBS AND DRUMS	
ILLUSTRATIONS CROWDS 2 & 2 II I USTRATION	15
HUBS & DRUMS SHOWN IN GROUPS 2 & 3 ILLEGIRATION	. 28
PARTS LIST	. 28
WHEELS AND HUB CAPS	. 28
WHEELS AND HOD CATE	
GROUP 6—STEERING & SHIFT CONTROL	
	. 29
INSTRUCTIONSILLUSTRATION	31
DADTO TIOT	
TIDAC I INV	
CEAD CHIET AND IACKET	- 40.0
STEERING GEAR	. 34
GROUP 7—ENGINE	
SPECIFICATIONS AND INSTRUCTIONS	. 35
TT T TOMP A MICAIO	
EXTERNAL VIEW	. 38
INTERNAL VIEW	11500



TABLE OF CONTENTS

CPOU				D	2	T	V
CPOIL	P	1	0-	D	U	ν	*

PA	RTS LIST CARD CASE 121 135	
	CARD CASE CHANNELS, REAR COMPARTMENT, A-3 121 CHANNELS, REAR COMPARTMENT, A-3 135	
	CHANNELS, REAR COUNTRIM BOARDS	
	DASH PANEL 120 DECK LID, A-3 120 121	
	DECK LID, A-3 DECK LID PANEL DECK PANEL, REAR, A-3 139	
	DECK LID PANEL DECK PANEL, REAR, A-3 DEFROSTER DOOR, CHECK STRAPS DOO	
	DOOR FRONT COMPLETE, WINNER HARDWARE, RET HAND 112	
	DOOR MOULDING	
	DOOR, TRIM PANELS, FRONT, LEFT HAND. DOOR, TRIM PANELS, REAR, RIGHT HAND. 141 DOOR, TRIM PANELS, REAR, RIGHT HAND. 142	
	TOOD TOIM DANKIS, RUGA, DD-	
	PRINCED DEAR	
	FENDER, FROM, STATE STAT	
	FLOOR MAIS	
	GLOVE COMPARTMENT	
	GRILLE	
	HEATER	
	HEATER 106 HOOD 107	THE PERSON NAMED IN
	HOOD	
	HOOD RELEASE & MEDALLION	
	INSTRUMENT PANEL	ì
	INSTRUMENT FAMES	
	LAMPS, DOME	
	LAMPS, HEAD	ţ
	LAMPS, LICENSE	ķ
	LAMPS, PARKING	į,
	LAMPS, ROOF LAMPS, TAIL 119	į
	LAMPS, TAIL LICENSE PLATE BRACKET, FRONT & REAR LUGGAGE COMPARTMENT BAFFLE ASSEMBLY 144	į
	LUGGAGE COMPARTMENT BAFFLE ASSEMBLE	
	METER GLOVE COMPARTMENT, OHMER CLASS 100	
	METER GLOVE. COMPARTMENT, PITTSBURGHT 1230 METER VISION FRAME	į
	METER VISION FRAME MIRROR, REAR VIEW MOULDING 118	į
	MOULDING NUMBER PLATE	-
	NOWIDER FLATE	
	OPTIONAL EQUIPMENT144	1
	12	ĺ
	PARTITION, UPPER 122	i
	I ANTITION, DOWNER, TOWNER, TO	



GROUP 11-COOLING AND HEATING	
PARTS LIST WATER PUMP WINTERFRONT WINTERFRONT CONTROLS	61 63 63
GROUP 12—EXHAUST	65
PARTS LIST	
GROUP 13—ELECTRICAL	72
SPECIFICATIONS AND INSTRUCTIONS DISTRIBUTOR GENERATOR REGULATOR STARTING MOTOR ILLUSTRATIONS DISTRIBUTOR GENERATOR STARTING MOTOR WIRING DIAGRAM PARTS LIST BATTERY BATTERY BATTERY CABLES BATTERY MOUNTING COIL DISTRIBUTOR GAUGES. INSTRUMENTS & ELECTRICAL HARDWARE GENERATOR GENERATOR MOUNTING HORN REGULATOR SPARK PLUGS AND CABLES STARTING MOTOR WIRING, CLIPS AND GROMMETS	. 77 . 75 . 85 . 80 . 68 . 87 . 88 . 87 . 76 . 88 . 88 . 87 76 88 87 90 87
GROUP 14—FUEL	95
INSTRUCTIONS CARBURETOR FUEL PUMP ILLUSTRATIONS CARBURETOR FUEL PUMP	99
PARTS LIST AIR CLEANER CARBURETOR FOOT THROTTLE CONTROL FUEL PUMP FUEL TANK HAND THROTTLE CONTROL	100
GROUP 15—LUBRICATION	104
ILLUSTRATION	
GROUP 16—BODY	143
ANTISQUEAK ARM REST ASH TRAY ASSIST STRAPS	107