

SERVICE BULLETIN

CAB SERVICE & PARTS CORPORATION

#25

SUBSIDIARY OF
CHECKER MOTORS
CORPORATION

NEW YORK * BROOKLINE
CHICAGO * DETROIT

January 1, 1959

Subject: COOLING SYSTEM - MODEL A-9

Description: WATER PUMP

This is a one-piece water pump with a sealed bearing that does not require lubrication.

DISASSEMBLY INSTRUCTIONS

When replacement of any internal parts becomes necessary, DISASSEMBLY MUST BE IN THE FOLLOWING SEQUENCE IN ORDER TO PREVENT DAMAGE TO THE PUMP.

1. Before removing pump use puller to remove fan hub from shaft.
2. Remove cap screws attaching pump to engine.
3. Remove countersunk screws holding cover, removing cover and gasket.
4. Use puller to remove the impeller, taking precautions to prevent damage to the casting.
5. Remove seal and water shedder.
6. Remove lock ring holding bearing and shaft assembly in body, after which shaft can be forced out through the front with an arbor press or lead hammer. DO NOT ATTEMPT TO DRIVE WATER PUMP SHAFT OUT THROUGH REAR OF HOUSING. To do so, will damage the housing beyond repair.

By: NEW YORK SERVICE DEPARTMENT